



3430 Unionville Pike
1-888-792-9343

Hatfield PA 19440
Fax 215-253-3966

Web Site Address:

www.jeeplinbyal.com

E-Mail Address:

sales@jeeplinbyal.com

Al's Y link extension installation

This link extension was designed to remove the stress on the Y link bushings when you lift your liberty.


Tool you will need:

- Jack stands
- Car jack
- Wrench set

1. Jack up the rear axle and set on jack stands
2. block the front wheels in front and back
3. remove the 3 factory bolts in the rear housing holding the Y link
4. with the factory bolts mount your new Jeepin by Al link extension
5. with the 3 new bolts you will mount the new Y link extension to the factory Y link
6. you will be able to adjust the angle on the pinion shaft with the washer pack (see below)




#1 has no washers between the bracket and the new link extension = less angle
Most Liberty's will use this setting or close to it.

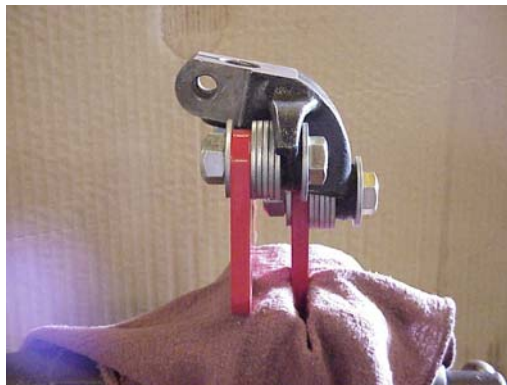

#2 has the maximum washers between the bracket and the new link extension = more angle

7. torque all bolts to factory specs

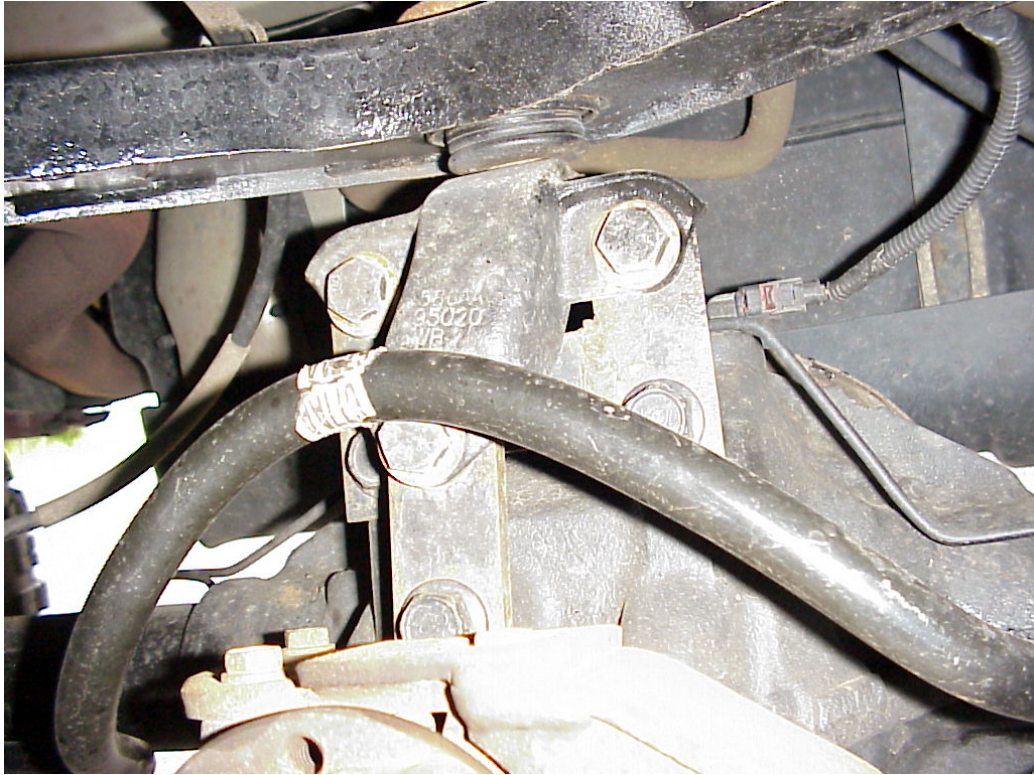

Your installed link extension should look like this.

8. jack up rear axle and remove jack stands
9. lower vehicle and remove blocks from front wheel

You are ready to go Jeepin!